

# Switchable Smart Glass

## MAINTENANCE AND CLEANING

### SWITCHABLE GLASS-

- The user or customer should clean the glass during subsequent weathering period.
- Never use abrasive cleaner to clean the glass especially when the glass surface has a reflective coating.
- Clean the glass panels with soft, clean, grit-free cloth dipping with soapy water. Wipe the glass to be dry. Never allow any hard parts or metal of the cleaning tools to contact the glass surfaces.
- Make sure switchable privacy glass switched off for at least 4 hours every 24 hours. A 24-hour timer is recommended to be installed for power transformers to ensure the smart glass is switched off for 4 hours.

### SWITCHABLE FILM-

- Power off the smart film before clean the films.
- Be careful with electrical connections during maintenance and cleaning.
- Never use abrasive cleaner to clean the switchable film surface.
- Clean the films with soft, clean, grit-free cloth dipping with soapy water. Wipe the PDLC film to be dry. Never allow any hard parts or metal of the cleaning tools to contact the film surfaces.
- Never scratch on the film surface, the switchable film is scratch resistant but not scratch proof.
- Do not power on until the smart film is 100% dry.

**CAUTION READ THIS TECHNICAL  
MANUAL BEFORE PROCEEDING!**